

GREEN LIGNIN in use




1. All you need to install the GREEN LIGNIN underlay is a carpet knife, a pencil, a tape measure and adhesive tape. Prepare the floor in advance. In case of residual moisture, please install an additional vapour barrier layer.



2. Decide the direction in which your flooring will be laid and install GREEN LIGNIN at a 90° angle to the long side of the floor boards.



4. Lay the GREEN LIGNIN sheets loosely together on the subfloor with the sheets offset from each other by half a width. If necessary, fix the plates with adhesive tape.

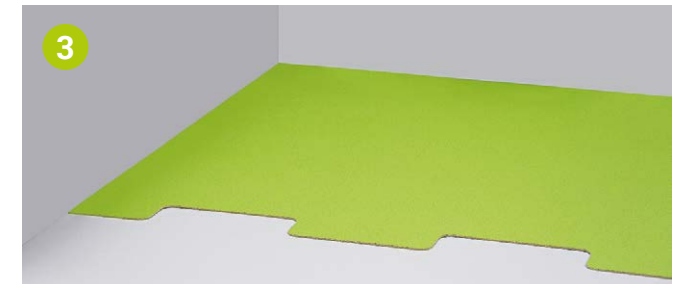

3. The sheets can be cut to size using a carpet knife. A gap of 10 mm must be left between the edge of the underlay and the walls/openings. When installing the GREEN LIGNIN “puzzle”-format, we recommend cutting a straight edge to the walls.



5. The overlay flooring can now be laid on top in accordance with the manufacturer's instructions.